

1. Q: Sometimes I cannot boot up from my floppy disk, Why?

A: Please try to enable the "Floppy Seek" in the BIOS utility.

2. Q: Where do I get the SiS IDE driver for my Win98SE on K7S8X?

A: SiS does not provide IDE driver for Win98SE and ME. Please use Windows 98SE/ME standard IDE driver.

3. Q: Does ASRock motherboard support "Boot from USB device", if my USB device is bootable?

A: Yes! All of ASRock motherboards support " Boot from USB device " .

When the system boot up, please press "F8" or "F11" to enter "Boot Menu" and select USB device for your fist boot device , then the system will boot from the USB device which you selected. For P4I45D, please plug the bootable USB device to USB port 2,3.

4. Q: Does ASRock AMD series motherboard support AMD FSB 333Mhz CPU?

A: ASRock K7S8X supports AMD FSB 333Mhz processor.

5. Q: K7S8X supports AGP 8X, but why can't I adjust to AGP 8X mode in BIOS?

A: Please install an AGP 8X card first. The AGP 8X option will be available only when an AGP 8X card is installed.

6. Q: I'm using a AMD Athlon XP 2000+ processor with FSB 266MHz on K7S8X, but the FSB jumper can only set from 100, 133, 166MHz. How do I adjust to FSB 266MHz?

A: Please understand that AMD Athlon XP 2000+ processor with FSB 266MHz is actually running with $133 \times 2 = 266$ MHz. Please adjust the FSB jumper to 100MHz for FSB 200MHz processors, 133MHz for FSB 266MHz processors and 166MHz for 333MHz processors.